

# Tyre Warmer - Tent



Contact – 07905224246 sales@bicknellmotorsport.co.uk

## Warning

Heater must be constantly monitored when in use and never leave unattended.

Due to the nature of the space heater it is suggested an extinguisher be present.

The deflector plate is carefully positioned to the underside of the rack to optimise temperature spread over the tyres.

Ensure the tyre nearest to the heater is positioned over the deflector plate to avoid heat blowing directly onto the edge of the first tyre.

Please note the aluminium frame can get extremely hot, always wear gloves and arm protection .



Suggested heater :- Clarke Devil 850

Ensure space heater protrudes 25mm to 50mm inside cover.

Constantly monitor temperature and regulate by adjustment of heater and the opening of vent flap as pictured below.



**Please Note:-** In situations of high winds ensure there are sets of wheels/tyres stored inside to weigh the unit down or pack away when not in use.